
Wall Mounted Battery

Pack Installation & Operation Manual

BR-OW-LV 11.77KWH

BR-OW-LV 14.33KWH

BR-OW-LV 15.36KWH

BR-OW-LV 16.07KWH



BASEN GREEN

1. Preface	01
2. Label Explanation	02
3. Product Description	02
4. Product Advantages	02
5. Product Technical Parameters	03
5.1 Specification	03
5.2 Interface Overview	04
5.3 Battery Management System (BMS)	06
5.3.1 Overcharge Protection	06
5.3.2 Overdischarge Protection	06
5.3.3 Overcurrent Protection	06
5.3.4 Over Temperature Protection	06
5.3.5 Low Temperature Protection	06
5.4 Optional Upgrade Feature	07
6. Installation and Configuration	08
6.1 Packing	08
6.2 Recommended Tools	08
6.3 Notice for Installation	09
6.4 Installation Procedure	09
7. Connection	11
7.1 Precautions Before Connecting The Inverter	11
7.2 RJ45 Connector Diagrams of Inverter's port	12
7.3 Precautions Before Connecting The Inverter with Battery in Parallel	13
7.4 Battery & Inverter Connection	14
7.5 Dip Code Switch Definition and Setting	14
8. Operation	16
8.1 Check Before Power on	16
8.2 Power on	16
9. Operation of Bluetooth	18
9.1 Bluetooth	18
9.2 Operation of Communication Protocol Switch(Via Bluetooth App)	21
10. Operation of Upper System	22
10.1 Log in	22
10.2 Switching communication protocols via PC	23
10.3 Communication Protocol Switching Via Classic Screen	24
10.4 Communication Protocol Switching Via Touch Screen	28
10.5 Communication Compatible List	28
11. Storage	29
12. Warning	29

1. Preface

This manual will provide detailed product information and installation instructions for users of the wall-mounted series products. Please read this manual carefully, and put this manual in a place where you can install, operate, and obtain it conveniently.

The safety precautions mentioned in the manual do not represent all the safety matters that should be observed, but are only supplementary to the safety precautions. When installing, operating, and maintaining equipment, local safety regulations and norms should be followed. Only trained professionals can install, operate and maintain equipment. The responsibility for losses will be not covered as the issue caused by violation of general safety operation requirements or violation of safety standards for the design, production, and use of equipment. Installation and maintenance personnel must have high-voltage and AC power operation skills. When installing, operating, and maintaining equipment, they must not wear any conductive objects, such as watches, bracelets, bracelets, and rings, and prevent moisture from entering the equipment.



Safety Instructions

High Voltage Danger

The high-voltage power supply provides power for the operation of the equipment. Direct contact or indirect contact with high-voltage power supply through wet objects will cause fatal danger.

Use Professional Tools

Always use professional tools instead of personal tools when working with high voltage and AC power

Anti-static

The static electricity generated by the human body will damage the electrostatic sensitive components on the board. Before touching the plug-in, circuit board or chip, make sure to take proper anti-static measures.

Operate Attention

The power must be cut off first before operation, do not hot-line work.

DC short circuit Danger

The power system provides a DC-regulated power supply, and a DC short circuit will damage the equipment and cause personal injury.

2. Label Explanation

The label contains the following information

BASENGREEN	
Product Name	Rechargeable LiFePO4 Battery
Battery Type	LiFePO4 LFP4
Product Model	BB-OW-LV 11.750V41
Battery Voltage Operation Range	43.2-57.6V
Nominal Capacity	230Ah@51.2V/177Wh
Max.Charged/Discharged Current	200A
Ingress Protection	IP55
Design code	Fsp72174J2081P16E6M0-5090
Operating Temperature Range: -With heating functional -Without heating function	-30°C-60°C -20°C-60°C
SN:	
<ul style="list-style-type: none"> • Do not place a child or pet touchable area. • Do not short-circuit the battery modules. • Do not attempt to open, disassemble, repair, tamper with, or modify the battery modules. • Do not insert unrelated objects into any part of the battery modules. • Do not impact, pull, drag, or step or put heavy things on battery modules. • Avoid direct sunlight, moisture, or liquid. • Follow the product manual to make wiring connection. • May only be operated by qualified professionals. • Recharge battery at least every 3 months(intel. when in storage) • Contact your supplier within 24 hours if any failure problems. 	

BASENGREEN	
Product Name	Rechargeable LiFePO4 Battery
Battery Type	LiFePO4 LFP4
Product Model	BB-OW-LV 14.600V41
Battery Voltage Operation Range	43.2-57.6V
Nominal Capacity	280Ah@51.2V/1436Wh
Max.Charged/Discharged Current	200A
Ingress Protection	IP55
Design code	Fsp72174J2081P16E6M0-5090
Operating Temperature Range: -With heating functional -Without heating function	-30°C-60°C -20°C-60°C
SN:	
<ul style="list-style-type: none"> • Do not place a child or pet touchable area. • Do not short-circuit the battery modules. • Do not attempt to open, disassemble, repair, tamper with, or modify the battery modules. • Do not insert unrelated objects into any part of the battery modules. • Do not impact, pull, drag, or step or put heavy things on battery modules. • Avoid direct sunlight, moisture, or liquid. • Follow the product manual to make wiring connection. • May only be operated by qualified professionals. • Recharge battery at least every 3 months(intel. when in storage) • Contact your supplier within 24 hours if any failure problems. 	

BASENGREEN	
Product Name	Rechargeable LiFePO4 Battery
Battery Type	LiFePO4 LFP4
Product Model	BB-OW-LV 16.350V41
Battery Voltage Operation Range	43.2-57.6V
Nominal Capacity	300Ah@51.2V/1536Wh
Max.Charged/Discharged Current	200A
Ingress Protection	IP55
Design code	Fsp72174J2081P16E6M0-5090
Operating Temperature Range: -With heating functional -Without heating function	-30°C-60°C -20°C-60°C
SN:	
<ul style="list-style-type: none"> • Do not place a child or pet touchable area. • Do not short-circuit the battery modules. • Do not insert unrelated objects into any part of the battery modules. • Do not impact, pull, drag, or step or put heavy things on battery modules. • Avoid direct sunlight, moisture, or liquid. • Follow the product manual to make wiring connection. • May only be operated by qualified professionals. • Recharge battery at least every 3 months(intel. when in storage) • Contact your supplier within 24 hours if any failure problems. 	

BASENGREEN	
Product Name	Rechargeable LiFePO4 Battery
Battery Type	LiFePO4 LFP4
Product Model	BB-OW-LV 16.250V41
Battery Voltage Operation Range	43.2-57.6V
Nominal Capacity	344Ah@51.2V/1760Wh
Max.Charged/Discharged Current	200A
Ingress Protection	IP55
Design code	Fsp72174J2081P16E6M0-5090
Operating Temperature Range: -With heating functional -Without heating function	-30°C-60°C -20°C-60°C
SN:	
<ul style="list-style-type: none"> • Do not place a child or pet touchable area. • Do not short-circuit the battery modules. • Do not attempt to open, disassemble, repair, tamper with, or modify the battery modules. • Do not insert unrelated objects into any part of the battery modules. • Do not impact, pull, drag, or step or put heavy things on battery modules. • Avoid direct sunlight, moisture, or liquid. • Follow the product manual to make wiring connection. • May only be operated by qualified professionals. • Recharge battery at least every 3 months(intel. when in storage) • Contact your supplier within 24 hours if any failure problems. 	

3. Product Description

This product is a lithium iron phosphate battery (LFP LiFePO4) composed of 16 cells in series. Which is suitable for home energy storage systems. It can be customized according to customer needs to meet diverse application scenarios and provide stable power for various equipment of users.

4. Product Advantages

- Built-in Battery Management System (BMS): Overcharge, overdischarge, overcurrent, temperature control, short circuit and other protection functions.
- Passive Balance Function: There is a voltage equalization function during the charging.
- High Cost Performance: High safety performance, long service life, stable and reliable quality.
- Expandable: Equipped with RS232/ RS485/ CAN bus ports, support up to 16 units in parallel.

- e. Wide Working Temperature: -20 C to 60 C , excellent high-temperature discharge performance.
- f. Convenient: Modular design, small size and lightweight, easy to install and maintain.

5. Product Technical Parameters

5.1 Specification

Item	Specifications			
Model	BR-OW-LV 11.77KWH	BR-OW-LV 14.33KWH	BR-OW-LV 15.36KWH	BR-OW-LV 16.07KWH
Nominal Voltage	51.2V	51.2V	51.2V	51.2V
Operating Voltage	43.2V-57.6V	43.2V-57.6V	43.2V-57.6V	43.2V-57.6V
Nominal Capacity	230AH	280AH	300AH	314AH
Total Energy	11776Wh	14336Wh	15360Wh	16076Wh
Configuration	1P16S	1P16S	1P16S	1P16S
Charging Cut-off Voltage	58.4V	58.4V	58.4V	58.4V
Discharge Cut-off Voltage	43.2V	43.2V	43.2V	43.2V
Operation Temperature	-20 C ~60 C	-20 C ~60 C	-20 C ~60 C	-20 C ~60 C
Standard Charging Current	50A	50A	50A	50A
Max Continuous Charging Current	200A	200A	200A	200A
Max Continuous Discharge Current	200A	200A	200A	200A
Dimension	500*232*670mm	475*255*770mm	475*255*770mm	475*255*770mm
Net weight	98KG	112KG	112KG	112KG


5.2 Interface Overview

P.S: There will be some differences in the appearance of the battery due to the version.

As shown in the picture

Take BR-OW-LV14.33KWH as example



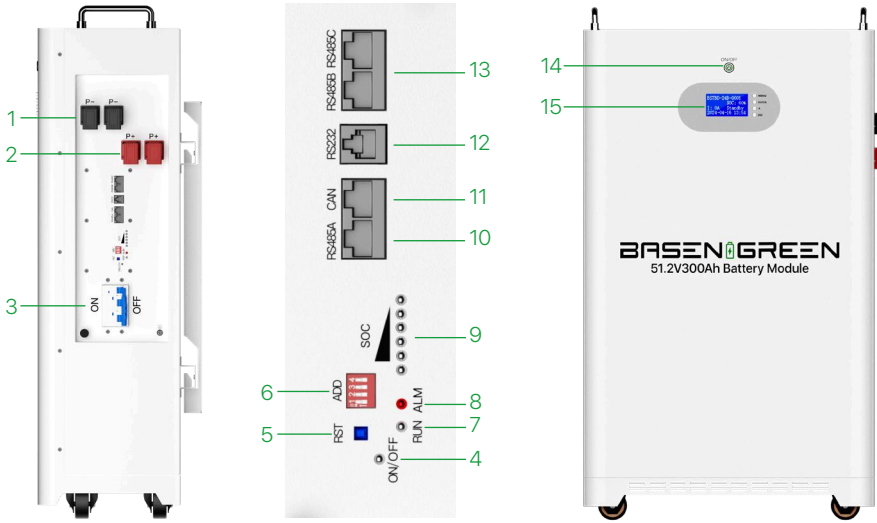

Position	Item	Description
1	P-	The negative terminal of the battery, can be connected to the negative pole of the inverter through a cable for DC output.
2	P+	The positive terminal of the battery, can be connected to the positive pole of the inverter through a cable for DC output.
3	Circuit breaker	Protect the battery against overloads and short circuits
4	Power Indicator	Turn on then light-on, turn off then light-off
5	RST	Manual-return switch button
6	ADD	Setting up battery parallel communication and inverter communication
7	RUN	Indicating the normal operation status of the battery
8	Alarm	Indicating the abnormal state of the battery, if there is an low voltage or over voltage, the alarm will sound.
9	SOC	6 indicators, indicating the remaining power status.
10	RS485 A	RS485 port for the inverter or the upper system communication
11	CAN	CAN port for the inverter communication
12	RS232	Communication port for the upper system.
13	RS485 B/C	RS485 port for parallel communication
14	Power switch	The switch for turn on/turn off the battery pack.
15	LCD Screen	Display battery voltage, SOC, temperature, etc.

5.3 Battery Management System (BMS)

5.3.1 Overcharge Protection

When the voltage of any single cell or whole battery pack is higher than the set value during the charging, and the duration reaches the limited time, the system enters the over charging protection state automatically, the charging MOS is turned off at the same time, and the battery cannot be charged. After the voltage of each cell and the whole battery pack drops below the cell over charging recovery value, the over charging protection state is released. It can also be released by discharging to return to normal state.

5.3.2 Overdischarge Protection

When the voltage of any single cell or whole battery pack is lower than the set value during discharging, and the duration reaches the limited time, the system enters the overdischarge protection state, the discharge MOS is turned off, and the battery cannot be discharged. After the overdischarge protection of the battery pack occurs, it can be released by charging the battery pack.

5.3.3 Overcurrent Protection

During charging and discharging, when the current exceeds the set value of the protection current, and the duration reaches the limited time, the system enters the overcurrent protection state, the charging and discharging MOS will be turned off automatically, and the battery cannot be charged and discharged, charging and discharging the battery pack can release the overcurrent protection state.

5.3.4 Over Temperature Protection

When the NTC detects the temperature of the battery cell surface is higher than the setting value of over temperature protection during charging and discharging, the management system enters the over temperature protection state, the charging or discharging MOS is turned off, and the battery pack cannot be charged or discharged in this state.

5.3.5 Low Temperature Protection

When the NTC detects that the temperature of the cell surface is lower than the setting value of low temperature protection during charging and discharging, the management system enters the low temperature protection state, the charging or discharging MOS is turned off, and the battery pack cannot be charged or discharged in this state.

5.4 Optional Upgrade Feature

Some BR-OW series models are equipped with the following optional upgraded features: touch color screen and led strip.

Touch Colorful Screen

- Colorful Display: Touch Screen, easy to operate.
- Multi-language: Arabic, English, German, Spanish, Italian, French, Polish, Romanian
- System Theme: Support Dark Theme



LED Strip

1. Power Indicate: 0-100% SOC
2. Light's Definition:

- Red light: "Battery alarm"-flash, "Battery protected or fault"-lights up
- Green light: "Power on or working"-lights up, "Charging"-flash
- Yellow light: "Lightboard communication error"
- Lights off: "Battery low voltage protection"



Red light



Green light



Yellow light



Lights off

6. Installation and configuration

6.1 Packing

a. After receiving the battery, open the box to check the battery surface if get any broken, cracks or other bad phenomena; if get that, please do not install, and need to contact the supplier, and wait for the supplier's reply before proceeding to the next step.

b. Please ensure that the following items are included in the packaging:



Battery*1



Mounting Bracket*1



Expansion bolts*10



Positive and negative cable
100cm 35mm²(optional)



M8*12mm
combination screws*2



Inverter
communication cable*1







Parallel
communication cable*1



Upper system
communication cable*1

6.2 Recommended Tools

Before installing the battery pack, the user needs to have the tools as following list:

Picture	Item	Description
	Level	Make sure the bracket is properly installed
	Hammer Drill	Drill holes on the wall
	Impact Wrench Set	Locking expansion bolts
	Electric Screwdriver	Wiring

	Hammer	Hanging the bracket
	Crimping Tool	Crimping tool for RJ45 terminal
	Crimping Plier	Crimping tool for insulated electric connectors
	Adjustable wrench	Loosening/tightening screws


6.3 Notice for Installation

- a. The wall for installation should be a solid brick or cement wall with a strong load-bearing capacity, and the thickness of the wall should not be less than 100mm.
- b. In indoor installation, it needs to leave enough space to be installed and operated easily and pay attention to ventilation. Do not place flammable materials around the battery.
- c. In outdoor installation, it needs to be surrounded by protective measures, and make a rain protection.


6.4 Installation Procedure

- a. Mark the drilling position using the wall mounting plate, and level using a spirit level.
- b. Place the wall mounting plate close to the wall firmly, mark the drilling position, and remove the wall mounting plate.
- c. Drill holes in the wall using the driller. The hole diameter is 12mm and the depth is 60mm.
- d. Fix the M8 Expansion bolts, tightening torque: 20N.m
- e. Loosen the 4 wheels on the battery, lift the battery parallel to the ground, and hang the battery module on the bracket as shown in the following figure:

Installation Diagram

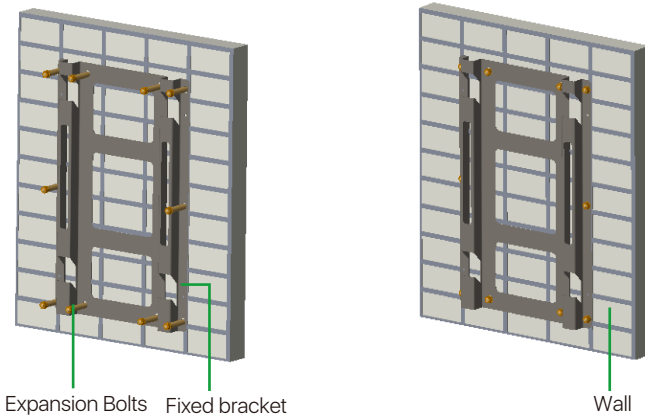


Notice: some of the models are equipped with fixed-direction wheels only.
It can be removed by using a Phillips screwdriver

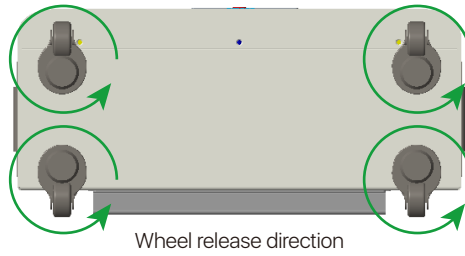


7. Connection

7.1 Precautions Before Connecting The Inverter

- Use a multi-meter to measure whether connection of the positive and negative cables are conducting, and check whether that connections are loose.
- The battery should be switched off before wiring to ensure that there is no DC output from the battery.
- Connect positive terminals of the battery and the inverter with red power cable, and then connect negative terminals of both sides with black power cable.
- Connect both communication ports of the battery(RS485A/CAN) and the inverter(BMS port) with the communication cable, BMS ports of inverter have different definitions for some brands, please check the inverter manual.


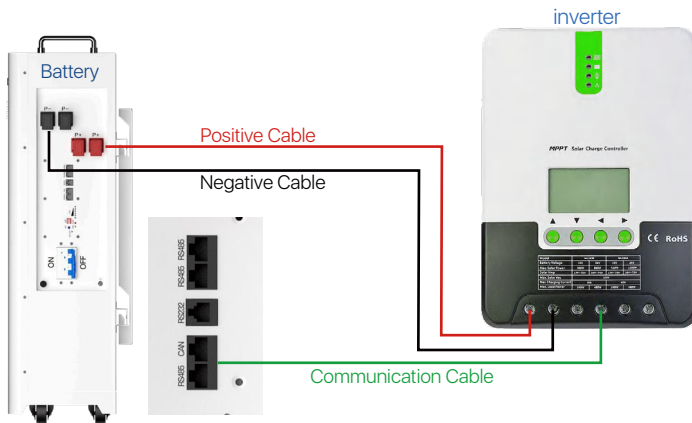


Communication cable connection Pin definition is as follows:

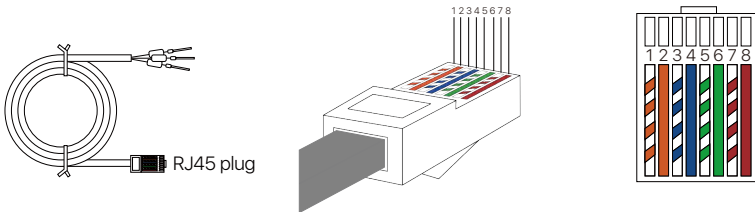

RS485A Port	PIN	1	2	3	4	5	6	7	8
	Define	RS485-B	RS485-A	GND	NC	NC	GND	RS485-A	RS485-B
CAN Port	PIN	1	2	3	4	5	6	7	8
	Define	NC	NC	NC	CAN-H	CAN-L	NC	GND	NC

7.2 RJ45 Connector Diagrams of Inverter's port

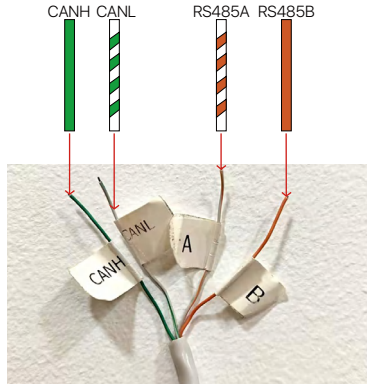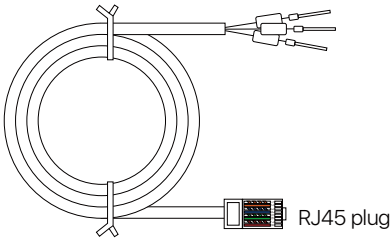


RJ45 Connector Diagrams	Communication
<p>Inverter</p> <p>Brand: DEYE, Growatt, Goodwe, Solis</p>	<p>CANH->pin4 CANL->pin5</p>
<p>Inverter</p> <p>Brand: Victron</p>	<p>CANH->pin7 CANL->pin8</p>
<p>Inverter</p> <p>Brand: Pylon, Growatt</p>	<p>RS485B->pin1 RS485A->pin2</p>
<p>Inverter</p> <p>Brand: Voltronic</p>	<p>RS485B->pin3 RS485A->pin5</p>


Please set up the RJ45 connector according to the pin definition of the inverter

7.3 Precautions Before Connecting The Inverter with The Battery Pack in Parallel

- a. Use a multi-meter to measure whether connection of the positive and negative cables are conducting, and check whether that connections are loose.
- b. The battery should be switched off before wiring to ensure that there is no DC output from the battery.
- c. Lock the parallel cable wires to the positive terminal of the battery pack first, then connect another end to the negative terminal.
- d. Parallel communication cable to the RS485 port of the battery pack.
- e. Connect positive terminals of the battery and the inverter with red power cable, and then connect negative terminals of both sides with black power cable.
- f. Connect both communication ports of the battery(RS485A/CAN) and the inverter(BMS port) with the communication cable, BMS ports of inverter have different definitions for some brands, please check the inverter manual.

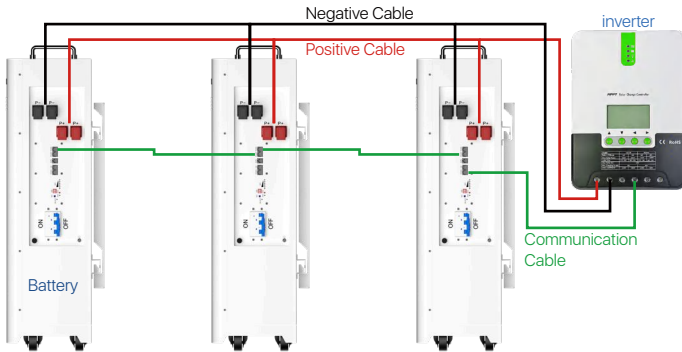


Parallel communication cable connection Pin definition is as follows:

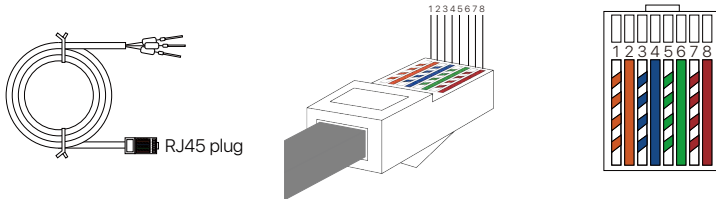

RS485 Parallel communication interface definition	PIN	1	2	3	4	5	6	7	8
	Define	RS485 -B	RS485 -A	GND	NC	NC	GND	RS485 -A	RS485 -B

7.4 Battery & Inverter Connection

Connect the positive and negative cables of the battery to the positive and negative terminals of the DC input of the inverter, insert the RJ45 crystal plug at one end of the distributed inverter communication cable to the RS485 of the battery, and connect the other end to the BMS terminal of the inverter according to the defined line voltage, and then connect the battery to the inverter.

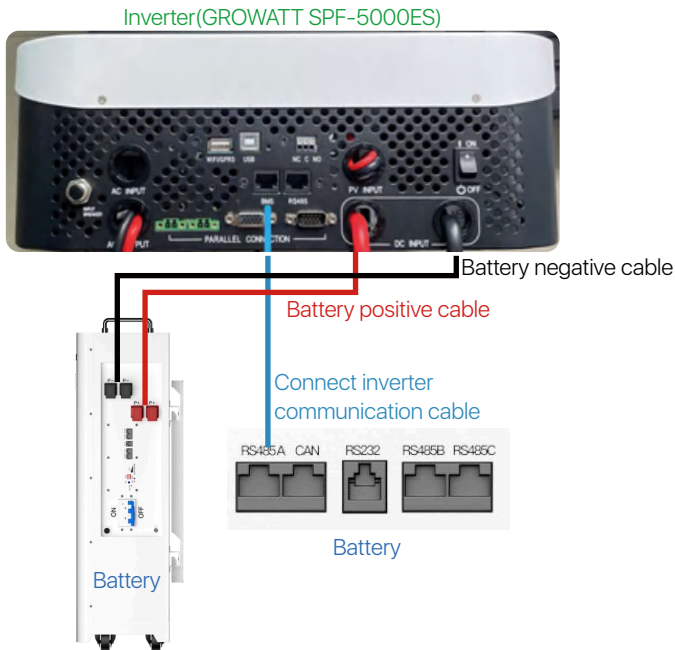


 














7.5 Dip Code Switch Definition and Setting

ADD switch is a 4-bit DIP switch to manually distribute the communication address of parallel batteries.

The BMS will recognize the DIP address in a few seconds. When the DIP address is 0, the battery is configured as stand-alone working mode or master working mode; When the DIP address is 1 to 15, the BMS is configured as the slave working mode.

Please refer to the table below to set the DIP switch for parallel connection of different batteries.

4-BIT					
Address	Dip Switch Position				Illustration
	#1	#2	#3	#4	
0	OFF	OFF	OFF	OFF	
1	ON	OFF	OFF	OFF	
2	OFF	ON	OFF	OFF	
3	ON	ON	OFF	OFF	
4	OFF	OFF	ON	OFF	
5	ON	OFF	ON	OFF	
6	OFF	ON	ON	OFF	
7	ON	ON	ON	OFF	
8	OFF	OFF	OFF	ON	
9	ON	OFF	OFF	ON	
10	OFF	ON	OFF	ON	
11	ON	ON	OFF	ON	
12	OFF	OFF	ON	ON	
13	ON	OFF	ON	ON	
14	OFF	ON	ON	ON	
15	ON	ON	ON	ON	

8. Operation

8.1 Check Before Power on

- Check all positive, negative cables and communication lines are connected correctly and safely.
- Check the battery is firmly installed, easy to operate and maintain, and check ventilation.
- Insulate the unused ports.

8.2 Power on

- Turn on the switch on the battery.
- The green running LED is normal on (Check the status of the LED indicators)
- If it is failed to switch on the battery system, check if all the electrical connection is correct.
- If the electrical connection is correct, but the battery system is still unable to switch on, contact our after-sale service within 48 hours

LED Indicator Status

Status	Charging					
Capacity Indicator	L1●	L2●	L3●	L4●	L5●	L6●
0 ~ 16.6%	Light	OFF	OFF	OFF	OFF	OFF
16.6 ~ 33.2%	Light	Light	OFF	OFF	OFF	OFF
33.2 ~ 49.8%	Light	Light	Light	OFF	OFF	OFF
49.8 ~ 66.4%	Light	Light	Light	Light	OFF	OFF
66.4 ~ 83.0%	Light	Light	Light	Light	Light	OFF
83.0 ~ 100%	Light	Light	Light	Light	Light	Light

Status	Discharge					
Capacity Indicator	L1●	L2●	L3●	L4●	L5●	L6●
0 ~ 16.6%	Light	OFF	OFF	OFF	OFF	OFF
16.6 ~ 33.2%	Light	Light	OFF	OFF	OFF	OFF
33.2 ~ 49.8%	Light	Light	Light	OFF	OFF	OFF
49.8 ~ 66.4%	Light	Light	Light	Light	OFF	OFF
66.4 ~ 83.0%	Light	Light	Light	Light	Light	OFF
83.0 ~ 100%	Light	Light	Light	Light	Light	Light

Flashing Definition

Item	Light	OFF
Flash 1	0.25 s	3.75 s
Flash 2	0.5 s	0.5 s
Flash 3	0.5 s	1.5 s

LED Flashing Faulty Please turn to the next page

Status	Normal/warning/ protection	RUN	ALM	Battery capacity LED						Specification
		●	●	●	●	●	●	●		
Power off	Sleep	OFF	OFF	ALL OFF						
Stand by	Normal	Flash1	OFF	Display according to the actual SOC						
	Warning	Flash1	OFF							
Charging	Normal	Flash2	OFF							
	Warning (Not including temperature)	Flash2	OFF							
	Over charging protection	Flash1	OFF							ALM OFF when protected during over charging
	Over Temperature, Low-temperature, Over current protection	Flash1	Flash2							
	Limited charging	Light	OFF							
Discharging	Normal	Light	OFF							
	Warning	Light	Flash3							ALM OFF when discharge over current
	Over discharge Protection	Flash1	OFF							ALM OFF when protected during over charging
	Over Temperature, Low-temperature、 Over current、 Shot Circuit、 Reverse Polarity Protection	Flash1	Flash2							
Invalidation	Error	OFF	Light	ALL OFF						Error refers to hardware deflection such as BMS voltage sampling device,charging MOS damage, temperature sensor disconnection, etc.

9. Operation of Bluetooth



BASENGREEN 48V battery pack is equipped with a Bluetooth function, supports APP monitoring battery statuses. All information available in the battery, such as the state of charge, voltage, operating current, temperature, and other operating information are transmitted in real-time via the Bluetooth transmitter. The parameters can be made visible with the BASENGREEN App.

Download: Android: "BASENGREEN" in Play Store


iOS: "BASENGREEN" in Apple Store

9.1 Bluetooth

a. For Android users, please visit the Google Play Store and search for 'BASENGREEN'. For iOS users, go to the Apple Store and look up 'BASENGREEN'.

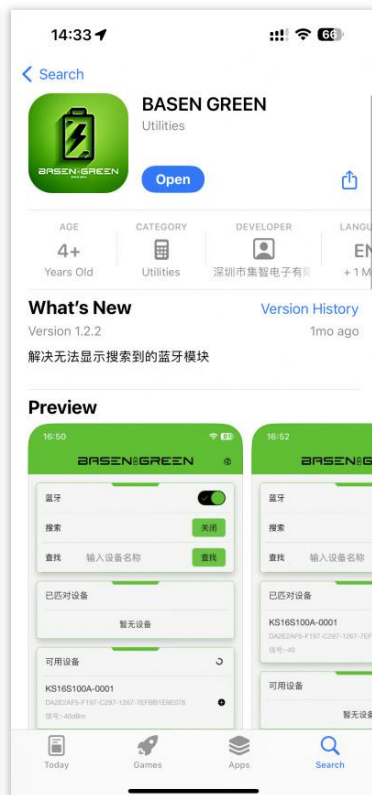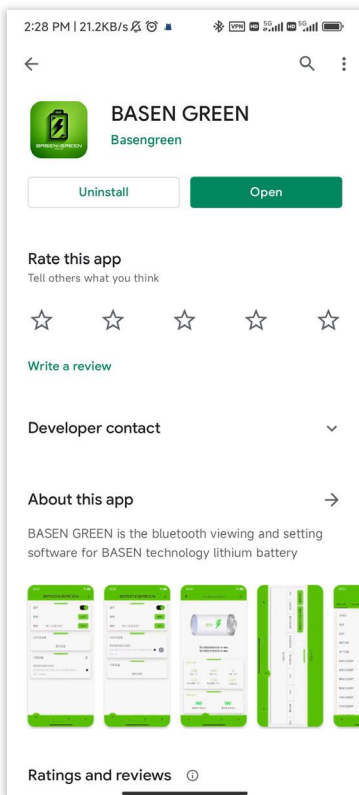

b. Turn on Bluetooth and search for the corresponding product's Bluetooth code

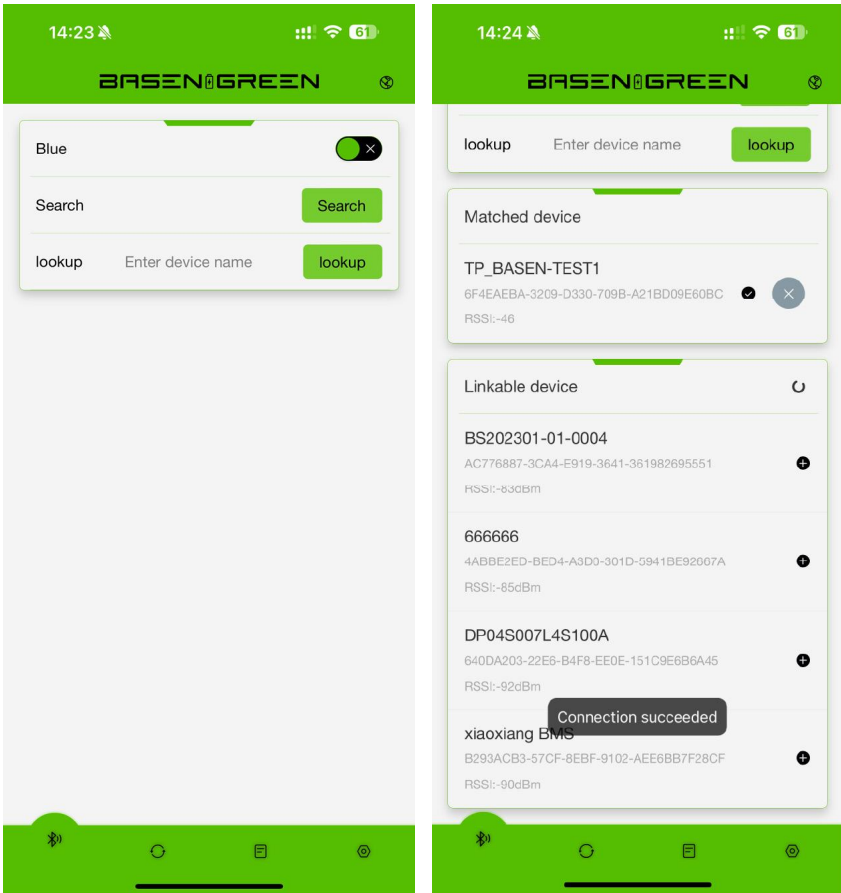

NOTE:

- 1.If you selected a battery to connect to and the app doesn't confirm the connection, it might be someone else is already connected to the battery. Only one device connects to the battery at the same time.
- 2.The Bluetooth app supports status monitoring only. It does not support any modified operation except communication protocol switching

c. Menu



Bluetooth list: Check the Device list and connect it.

Homepage: Check the status of battery-SOC, Volt, Current, Temperature, etc.

Historical Data: Not available

Setting: Base Message: Check the pack voltage, current, cycle time, etc.

Cell Voltage: Check the cells voltage.

Language: English/Chinese switching.

Fault Data: Not available

System Parameter: Not available


Set up WiFi: Setup WiFi function(Not available)

Inverter configuration: Communication protocol switching(Chapter 9.2)


9.2. Operation of Communication Protocol Switch(Via Bluetooth App)

a. Connect to the Bluetooth app first(Chapter 9.1)

b. Swipe left to find 'Inverter Configuration'. Set unlock code is 888888

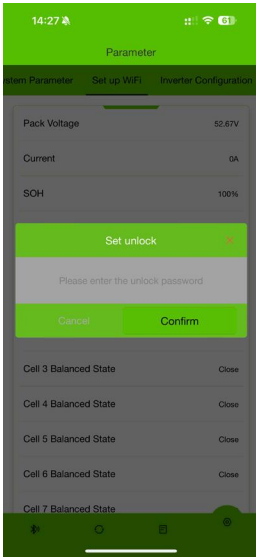

c. Choose the communication protocol and set, the battery pack will be restart after few second with “bee” sound. Then set up is successful.

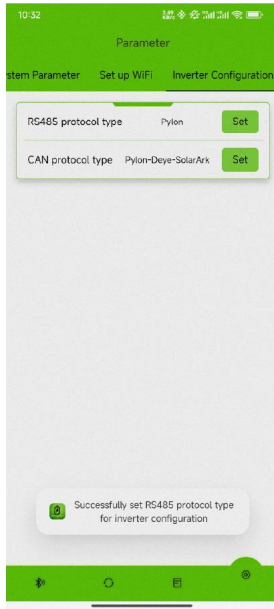

10. Operation of Upper System


BASEN 48V battery pack supports to connect with our upper system to monitor the status of the battery and modify the communication protocol, please contact our sales representative or visit our website to get the latest upper system software.

10.1 Log in

- The upper system communication cable connects to the RS485 port on the battery and then to the USB port on the PC/Laptop
- Download and open the upper system software
- Modify the language
- Updated the status of battery automatically

Notice: If it is failed to connect to the upper system, check if all the connection is correct. If the connection is correct, but the upper system is still unable to work, please contact our after-sale service




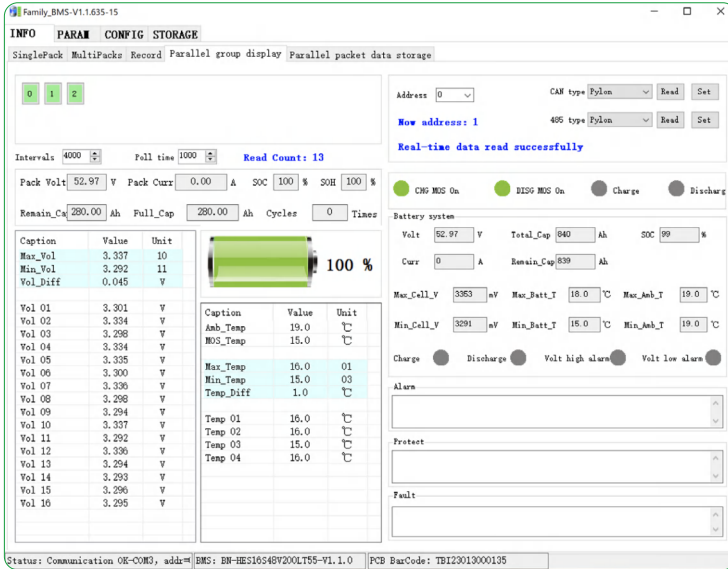

10.2 Switching communication protocols via PC

Connect to the upper system and follow the path:

INFO—Parallel Group Display—CAN Type/RS485 Type—Read—Choose the protocol—Set

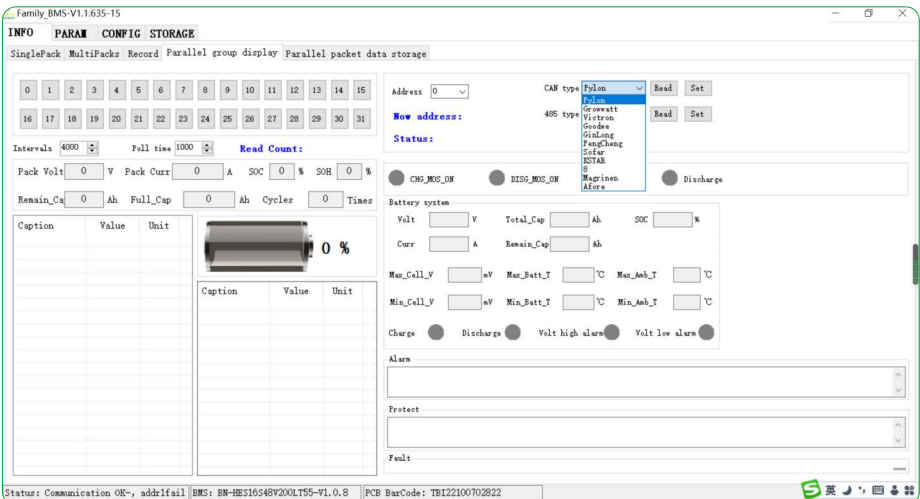

10.3 Communication Protocol Switching Via Classic Screen

1. Introduction



There are 4 buttons on the side of screen

MENU : Enter the "MENU" page

ENTER : Confirm the change/enter the next page

▼ : Select items/turn pages

ESC : Back to the last page

2. Switch the communication protocol

a. Turns on the battery, the screen will lights up and shows the data.



b. Click "MENU" button, then click ▼, enter the "CommType Set" page.




c. There are CAN/RS485 options, click the correct option based on the inverter model.
(Default communication protocol: Pylon)



d. Choose the protocol and click the "ENTER" button.



e. All of the indicators will light up after 3-5 seconds, and then it has a "bee" sound. The screen will show the latest communication protocol, which means the protocol has been updated successfully.

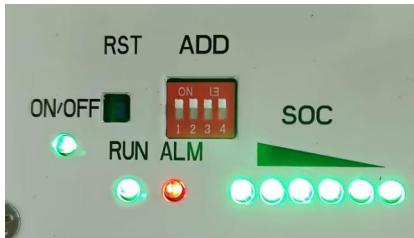


10.4 Communication Protocol Switching Via Touch Screen

1. Introduction


Touch Colorful Screen

- Colorful Display: Touch Screen, easy to operate.
- Multi-language: Arabic, English, German, Spanish, Italian, French, Polish, Romanian
- System Theme: Support Dark Theme

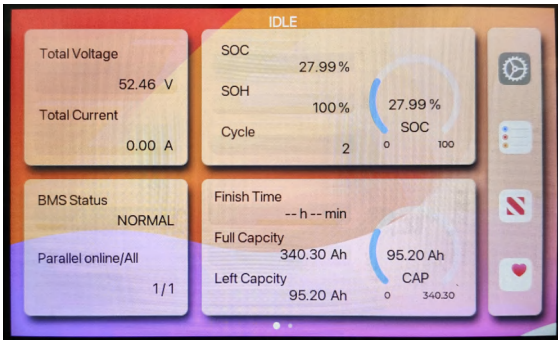


2. Switch the communication protocol


- Turns on the battery, the screen will lights up and shows the data.

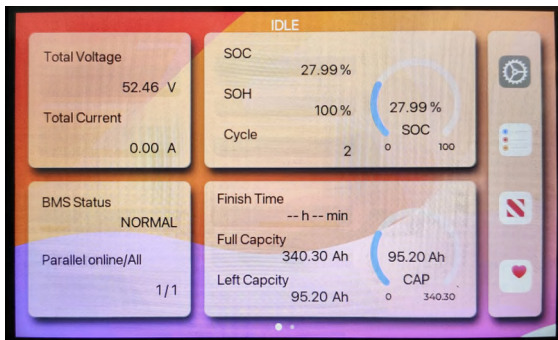



- Click the "⚙️", then click protocol in the setting page

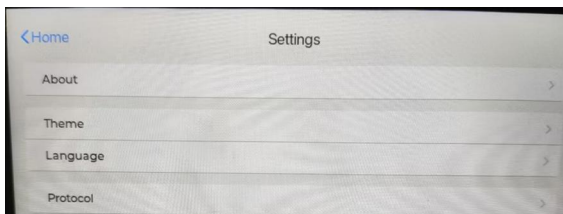


c. There are CAN/RS485 options, click "Read" to check the currently protocol
(Default communication protocol: Pylon)

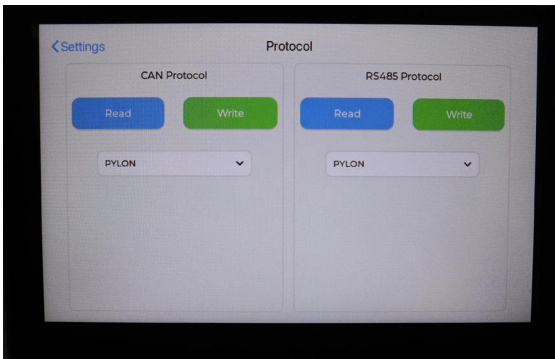

d. Choose the protocol and click the "write" button, it will shows "success"

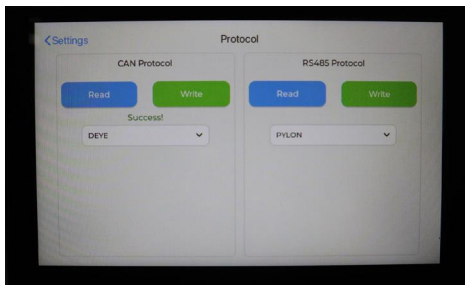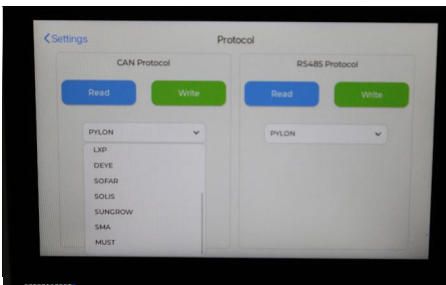

e. Back to the home page, Swipe left to go to the next view.

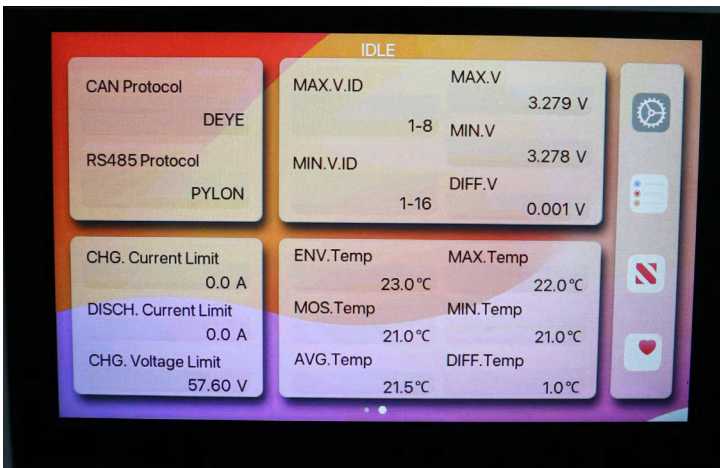

10.5 Communication Compatible List

BASEN BMS Inverter Communication Protocol Matching Table						
Inverter Brand		Communication method	Protocol Name	Protocol Remarks	Communication Potter rate	Interface Definition
维克托-Victron		CAN	Victron-CAN-V1.00- 211135	Active Upload	500K	7H, 8L
古瑞瓦特-SPF Growatt-SPF		485	Growatt BMS-RS485-protocol-1xSocP_ESSL_V2.01 Growatt BMS-RS485-protocol-V2.0	MODBUS Standard protocols	9600	1B, 2A
古瑞瓦特-SPF Growatt-SPF		CAN	Growatt BMS CAN-Bus-protocol-low-voltage-V1.05	Active Upload	500K	4H, 5L
古瑞瓦特-SPH Growatt-SPF		CAN	Growatt BMS communication protocol of growatt low voltage-V1.01	Active Upload	500K	4H, 5L
德业 Deye		CAN	Deye LV-CAN communication protocol	Active Upload	500K	4H, 5L
德业 Deye		485	485 Modbus Protocol(4)-deye	MODBUS protocols	9600	1B, 2A
尚科-Solar		CAN	Growatt BMS CAN-Bus-protocol-low-voltage-V1.05	Active Upload	500K	4H, 5L
固德威-Goodwe		CAN	Goodwe-CAN-V1.7-220228-SolarinverterFamily-EN	Active Upload	500K	4H, 5L
日月元-Voltronic Power		485	Voltronic Power-485-V1.03-200325	MODBUS protocols	9600	3B, 5A
首航-SOFAR		CAN	SOFAR-CAN-V1.00-211117-Rev6	Active Upload	500K	1H, 2L
锦浪-Solis		CAN	Solis-CAN-V1.0-191228-lowVoltage	Active Upload	500K	4H, 5L
鹏城-Luxpower		CAN	Luxpowertek Battery CAN Protocol -2021	Active Upload	500K	4H, 3L
派能-Pylontech		485	Pylon-485-V3.5-161216-low voltage protocol	1363	115200	1B, 2A
派能-Pylontech		485	Pylon-485-V3.5-161216-low voltage protocol	1363	9600	1B, 2A
派能-Pylontech		CAN	Pylon-CAN-V1.2- 180408 -lowVoltage	Active Upload	500K	4H, 5L
硕日-Srne		485	shuori BMS Modbus Protocol for RS485 V1.3(2020-11-24)	MODBUS	9600	7A, 8B
美世乐 Must		CAN	PV1800F-CAN communication Protocol.04.04	Active Upload	100K	6H, 5L
艾思玛 SMA		CAN	SMA-CAN-V1.0.0-210630-FSS -ConnectingBat-TI-en-20W	Active Upload	500K	4H, 5L
阳光电源 SUNGROW		CAN	Pylon-CAN-V1.2- 180408 -lowVoltage	Active Upload	500K	4H, 5L
爱士维 AiSWEI		CAN	Pylon-CAN-V1.2- 180408 -lowVoltage	Active Upload	500K	4H, 5L
英威腾 INVT		CAN	Pylon-CAN-V1.2- 180408 -lowVoltage	Active Upload	500K	4H, 5L
科士达 KSTAR		CAN	Kstar_CAN_Protocol-V1.11	Active Upload	500K	4H, 5L
艾伏 Afore		CAN	Afore Communication Protocol CAN Bus Version V1.02_20210104	Active Upload	500K	4H, 5L
索瑞德-SOROTEC		CAN	CAN Protocol 1.0(SOROTEC Protocol)	MODBUS Standard protocols	500K	4H, 5L
索瑞德 SOROTEC		485	Protocol between Sorotec Inverter and Lithium Battery (RS485)	Active Upload	500K	1B, 2A
SOL-ARK		CAN	Sol-Ark CAN Bus Protocol V1.2.pdf4-25-22		500K	4H, 5L
迈格瑞能 MEGAREVO		CAN	Shenzhen MEGAREVO Hybrid Inverter-5K BMS Protocol V1.01	Active Upload	500K	4H, 5L
MPP Solar		485	BMS 485 communication protocol 20200325(2)	MODBUS	9600	1B, 2A
拓宝-TBB		CAN	CAN BUS Protocol of TBB Lithium Battery BMS Platform V 1.1	Active Upload	500K	4H, 5L
盛能杰-Senergy		CAN	SenergyINV&BMS_CAN_Protocols	Active Upload		4H, 5L

11. Storage

- a. External terminals of the battery pack are insulated and protected.
- b. If the battery pack is stored for a long period of time without use, it is recommended that it be charged 30%-60%, and it is prohibited to store it completely uncharged.
- c. Batteries that have been in storage for more than 3 months should be recharged for 2-3 hours at 0.2C~0.3C.
- d. Batteries should be stored in a dry, clean, ventilated, non-corrosive gas environment, away from sources of ignition, to avoid exposure to the sun.
- e. Do not store or put in high temperatures over 60°C for a long period of time, otherwise, it will cause function deterioration and life span reduction.

12. Warning

To prevent possible battery leakage, heat generation, and explosion, please observe the following warning:

Warning!

- a. It is strictly forbidden to immerse the battery in seawater or water. When not in use, it should be placed in a cool and dry environment;
- b. It is strictly forbidden to reverse the positive and negative poles to use the battery;
- c. It is forbidden to use metal to directly connect the positive and negative electrodes of the battery to a short circuit;
- d. It is forbidden to transport or store batteries together with metals, such as hairpins, necklaces, etc;
- e. It is forbidden to knock or throw, step on the battery, etc.;
- f. It is forbidden to directly weld the battery and pierce the battery with nails or other sharp objects.

Attention!

- a. It is forbidden to use or place the battery under high temperatures (in the hot sun or in a very hot car), otherwise, it may cause the battery to overheat, catch fire or fail to function, and shorten its life; the recommended temperature for long-term battery storage is 10-45°C;
- b. It is forbidden to throw batteries into fires or heaters to prevent fire, explosion, and environmental pollution. Scrapped batteries should be returned to the supplier or battery recycling point for disposal;
- c. Do not use it in places with strong static electricity and strong magnetic fields, otherwise it will easily damage the battery safety protection device and bring unsafe hidden dangers;
- d. If the battery leaks and the electrolyte enters the eyes, do not rub it. Immediately rinse the eyes with clean water and send them to the hospital for treatment, otherwise, the eyes will be hurt. If the battery emits an odor, heats up, discolors, deforms, or has any abnormality during use, storage, or charging, immediately remove the battery from the device or charger and stop using it;
- e. It is forbidden to insert the positive and negative poles of the battery directly into the power socket, and a special charger for lithium-ion batteries must be used;
- f. Check the battery voltage and connectors before installation, and use it only after everything is normal;
- g. The battery is stored in half power. If the battery has not been used for three months, it needs to be recharged once;
- h. If the electrode is dirty, it should be wiped with a dry cloth before use. Otherwise, it may cause poor contact and function failure;

Need additional information?

Just Contact BASEN!

BASEN  GREEN

BASENGREEN
YOUR RELIABLE POWER



Fax: (+86)0755-84737145



Tex: (+86)130 0887 9993



Email: info@basen-power.com



Shenzhen Basen Technology Co., Ltd.



Add: Room 303, Building 3, 1980 Culture and Technology Industrial Park,
Donghuan Road, Longhua District, Shenzhen